

Jerrold Converter Instructions

Please Read Our Disclaimer Online at:

<http://www.cableboxnet.com/>, Before connecting or using this equipment.

When you plug the boxes power cord in the wall socket, allow the box 3-7 seconds to turn on by it self. The box must be allowed to turn it self on any time the boxes power is un-plugged or the box is moved etc. After the box turned on by it self you can turn the box on or off by using the remote or by pushing the ●/o button on top of the box. The remote is pre programmed for this box and never requires re programming. We have included a User manual on CD that covers all box functions, including Parental Control. The manual may be printed using a printer by following the printing instructions Picture.

Jerrold and General Instruments

Connecting the converter: Very Important: When you receive the unit, connect the incoming and out to the TV cables--then plug the unit in. After 3-7 seconds 02 should pop up on the converter display. Scroll through all your channels. Most likely some or many channels will appear in the wrong order. This is very common on Jerrold systems and is because your cable company is using "channel mapping". Try and locate the the premium channels (pay-per view is best). If they are descrambled (can be viewed clearly) then you are done. If you scroll through channels 2-13 and most of them are very fuzzy or static, proceed to HRC Instructions. If some of the premium channels desramble and some do not (are still scrambled), proceed to Multi-Mode Instructions.

HRC INSTRUCTIONS: Unplug the unit. Hold the switch located on the back of the unit down while plugging the unit into the wall. Wait for 02 to show on the converter display. Release the switch. All basic channels should be viewable. If any premium channels are showing scrambled, proceed to Multi-Mode Instructions.

MULTI-MODE INSTRUCTIONS: Jerrold systems are capable of 256 different scrambling modes. If any of your premium channels come through scrambled after connecting the unit, press the switch on the back of the unit to scroll through the different modes. Each time you press the switch you will advance one mode. Eventually you should be able to lock onto the correct mode and the picture will "pop in". Remember that there are 256 possible modes. (If you have a multi-mode unit, it will now switch automatically at the same time as your cable system.)

Locked Up: If your converter ever locks up--this means that even though you change the channel, the picture stays the same (or the channels won't change or the converter will not respond to the remote)--UNPLUG THE UNIT FOR 15 MINUTES. The converter will reset and should resume normal operation upon plugging it back in.

WARNING

Installation of a test chip or test board DOES NOT mean you can legally watch channels that you have NOT PAID for. Use of the test chip or board is legally limited to testing descramblers and viewing channels that have been paid for but are otherwise not viewable.

One example could be where a second box has been installed, with a test chip, in a house that has paid for cable programming and the cable company is unable to authorize the second box. Another example is where the descrambler, because of some electrical fault, is incapable of displaying channels that have been paid for.

Boxes with test chips will display all programming input to it, but you are legally only authorized to view programming you have paid for. If you have any doubt as to whether or not you would be breaking the law in you community, we suggest that you consult an attorney for legal advice before installing or testing any channels.